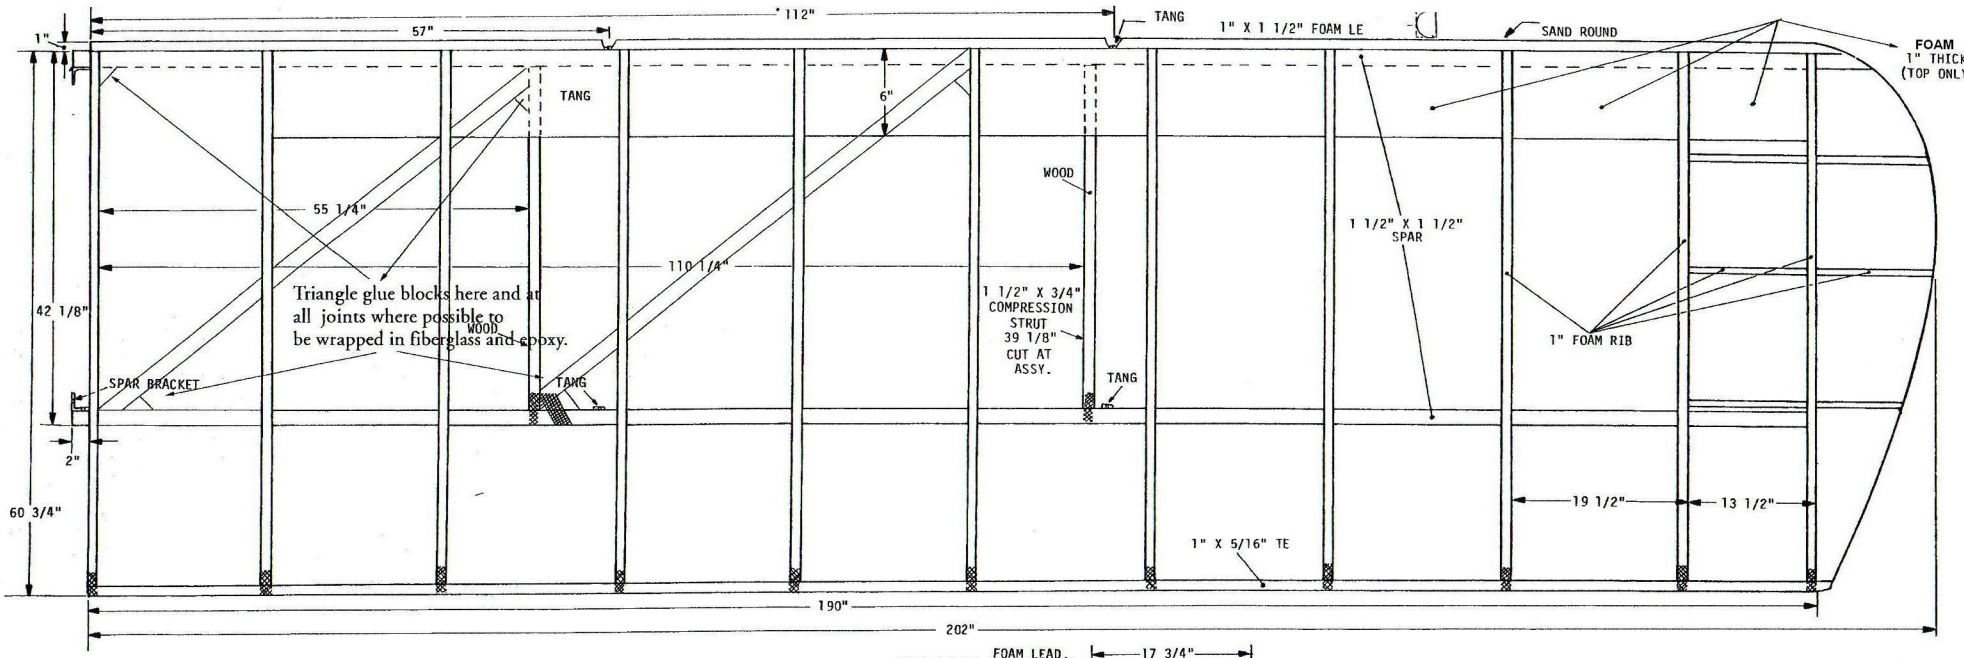

Diagonal Drag struts are same size as main spar

Optionally, 3 sets of criss crossed wires between the spars may be used for anti-drag bracing

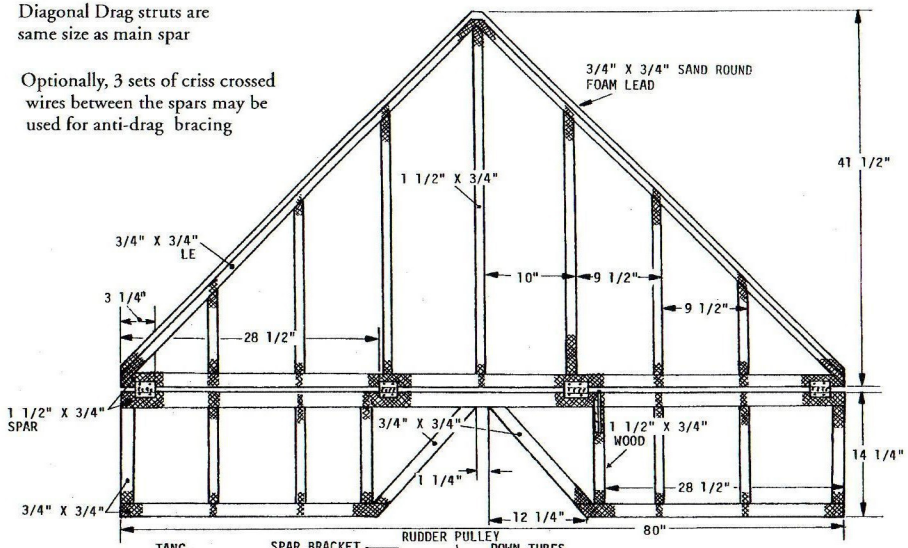

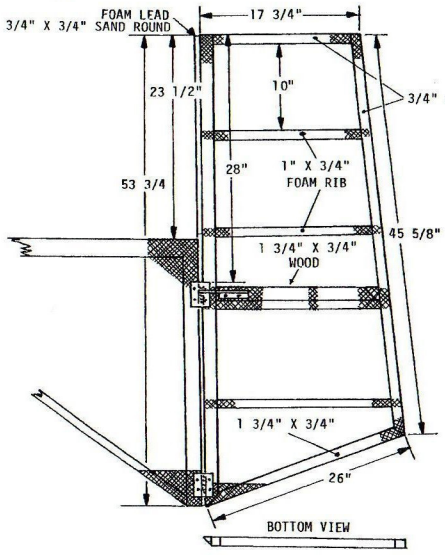

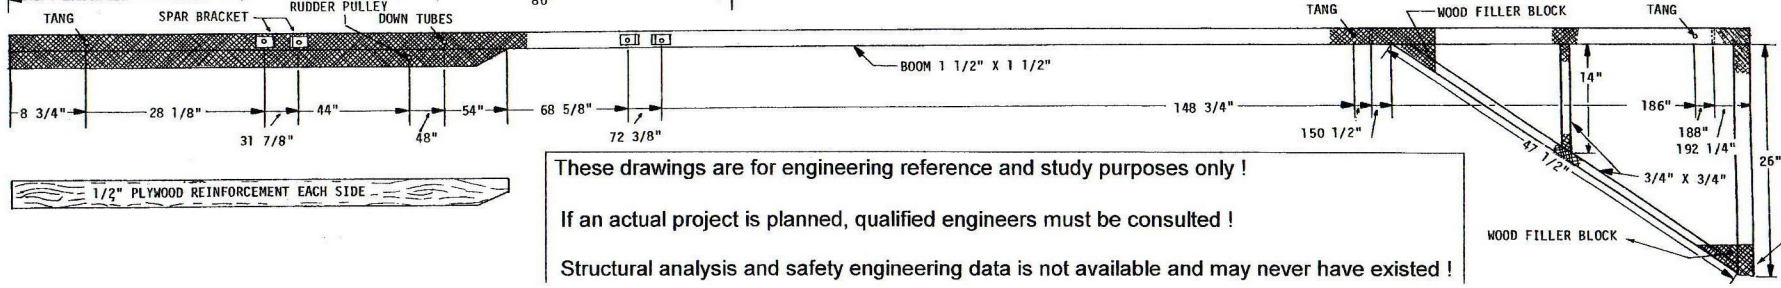

1/2" PLYWOOD REINFORCEMENT EACH SIDE

These drawings are for engineering reference and study purposes only !

If an actual project is planned, qualified engineers must be consulted !

Structural analysis and safety engineering data is not available and may never have existed !